

# KINGPIN®

## HINGE ARM INSTALLATION INSTRUCTIONS

Kingpin is available in three different sizes. To ensure correct performance, confirm you have purchased the right Kingpin hinge arm for your valve.

To make selection easy, the packaging of the Hingearm is colour coded to the packaging of each valve.

- 69/72 – Orange
- AP/AB – Yellow/Green
- Xcess/Ultraflo – Dark Green

If the packaging is no longer present you can confirm the Kingpin variant looking at the stamp on the arm, near the hinge.

### INSTALLATION:

Installation of the Kingpin arm is easy:

1. Remove the split pin and pull out the old trough arm
2. Insert the Kingpin arm in the correct orientation with the nut pointing up (see below)
3. Reinsert the split pin to fix the arm

To function correctly, the Kingpin hinge arm needs to be installed in a particular orientation. The arm **must** be installed with the retention nut pointing upwards, as shown in the diagram below.

