# **Digital Backflow Test Kit** USER GUIDE & SPECIFICATIONS

## **HYDROFLÔW**



### Contents

1. Specifications	2			
2. Keypad layout	3			
2.1 Functions	0			
3. Operation	3			
3.1 On/Off				
Set Zero				
3.2 Pressure Units				
3.3 Back Light				
3.4 Adjust damping				
3.5 Peak values				
	4			
4. Error Code Description				
	4			
5. Problem & Troubleshooting	_			
	4			
6. Calibration Requirements				





#### **\*IMPORTANT\***

Ensure your test kit is drained before storing it. Open all valves and drain hoses prior to storage. Storing in a damp environment will void the warranty of this product.

Model: HFD-DTK Static Max Pressure Range: 0-2000kPa Pressure Differential Measuring Range: 0-350kPa Over Pressure: 700kPa Accuracy: 0.5% FS Includes Long term stability Power: 3V (2 x Alkaline AAA batteries.) Battery Life: Est 8-12 months Sampling rate: 3 times / Sec Damping Selectable from: 0.1 - 10 Display: 4-digit LCD Back light Resolution: 0.1 kPa. Temperature Compensated pressure range: 0 - 40°C Operating temperature range: -20 to 85°C IP Rating: IP55, with rubber protective boot fitted.

This unit meets the requirements of AS/NZS 2845.3:2020 Water Supply- Backflow prevention devices.





### 2. Keypad layout

#### 2.1 Functions



#### Power

#### Pressure units; Selectable

- kPa, PSI, kgf/cm2, MPa, mmH20, mmHg, inH20 inHg, & Torr



Zero set

**Back light** 

### **3. Operation Instructions**

#### 3.1. On/Off

- A short press of the "POWER" O button turns the unit ON. (Hold the "POWER" button to turn OFF).
- Allow the unit to stabilize with all valves open and no pressure connected ensure the meter reads 0.00 kPa. If Digital Gauge does not settle at 0.00 Perform a **Set Zero** by pressing and holding the "ZERO" button approximately 3-4 seconds.

UNIT

ZERO

#### 3.2. Selecting Pressure Unit of Measure

• A short press of the "UNIT" button will scroll through units of measure: - kPa, PSI, kgf/cm2, MPa, mmH20, mmHg, inH20 inHg, & Torr

#### 3.3. Back Light

• A short press of the "LIGHT" ( \* ) button turns the backlight on for 20 seconds. (Hold for 3 seconds for backlight to stay on).

#### 3.4. Adjust Damping

- A short press of the "LIGHT" ( \* ) and "ZERO" zero) buttons + brings up code: r-03.
- Change the value by pressing "ZERO" ZERO button between 0.1 to 10.
- Use the "LIGHT" ( \* ) button to save setting and exit menu.

### Note: The lower the value the Faster the display will change, the bigger the value the slower the display will change. (0.1 faster response, 10 slow response).

#### 3.5. Peak Values

- Press and hold "UNIT" button for approx. 4 seconds. Display will show Max Value.
- Short Press "UNIT" ( UNIT ) button again will display Min Value.
- Short Press "ZERO" (ZERO) button to clear recorded reading while in this menu.
- Press "UNIT" button again to quit menu.



### 4. Error Code Description

No.	Code	Description	
1	E-E	Sensor damaged.	
2	E-H	Applied pressure over range or sensor damage.	
3	E-P	Enter pressure calibration procedure, please power off and exit	
4	P-C	Enter Temperature Compensation Procedure, please turn off and exit.	
5	r-03	Damping Filter Setting 1-10.	
6	Max	Maximum reading.	
7	Min	Minimum reading.	

### 5. Problem & Troubleshooting

No.	Problem	Reason	Solution
1	Backlight dark	Low better	Replace batteries
2	Battery image blinking	Low battery	
3	Pressure reading not changing	1. Pressure line blocked 2. "ZERO" pressed (SetZero) while under pressure 3. Sensor Damaged	<ol> <li>Check Pressure lines.</li> <li>Disconnect and re-SetZero with no pressure applied.</li> <li>Contact Hydroflow Distributors Ltd.</li> </ol>
4	E-H	1. Pressure overload back off pressure. 2. Sensor Damaged.	1. Should start reading below 350kPa (max differential reading; 0- 350kPa). 2. If Code remains contact Hydroflow Distributors Ltd.
5	Readings change slowly	Domping set to Low	See: 3.4. of instructions: Adjust Damping.
6	Readings change rapidly	Damping set to LOW	

### **6.** Calibration Requirements

Equipment used for testing backflow prevention devices shall be calibrated annually or as required by a suitably accredited laboratory, using the intent of MSA Test Method 2 or Test Method 1, with the minimum test points being 100, 70, 50, 35, 20, 14, 10 and 7 kPa.



